

[Home](#) [Search](#)[Register](#)[FAQ](#) • [Search](#) • [Login](#)[View unanswered posts](#) | [View active topics](#) | [View unsolved topics](#)

It is currently Sat Jul 07, 2012 1:23 pm



[Board index](#) » [Ignition](#) » [Ignition Design Help](#)

All times are UTC - 8 hours

### Saving from the PDF Viewer Component

**Moderators:** [dave.fogle](#), [michael.stofan](#), [mgross](#), [Colby.Clegg](#), [Travis.Cox](#), [Carl.Gould](#), [nathan](#), [Kevin.Herron](#), [Robert.McKenzie](#), [James.Lorenz](#), [Greg.Simpson](#)[New Topic](#)[Post Reply](#)Page **1** of **1** [ 2 posts ][Print view](#)[Previous topic](#) | [Next topic](#)

### Saving from the PDF Viewer Component

Author	Message
<b>Gavin</b> Trooper  <b>Joined:</b> Wed Apr 07, 2010 7:44 am <b>Posts:</b> 13	<p>▶ <b>Saving from the PDF Viewer Component</b></p> <p>At the moment we generate pdf reports using the Report Viewer component. Users can then view these reports via the PDF viewer component. Is there any similar function in the PDF viewer component similar to the 'getBytesPDF' function in the Report Viewer component, such that a user can save a file locally to their hard drive?</p> <p>Or is there any other easier way to save these reports locally if they are available via the Servers URL address?</p> <p>Thanks, Gavin</p>
Tue Oct 19, 2010 8:33 am	<a href="#">PROFILE</a>
<b>Travis.Cox</b> Moderator  <b>Joined:</b> Sun Apr 02, 2006 2:46 pm <b>Posts:</b> 1341 <b>Location:</b> Sacramento, CA	<p>▶ <b>Re: Saving from the PDF Viewer Component</b></p> <p>The PDF viewer does not have that function. However, you can use the</p> <div><b>Code:</b> <pre>bytes = system.file.readFileAsBytes(filename)</pre></div> <p>to get the bytes from a file.</p> <hr/> <p>Travis Cox Inductive Automation Technical Support Rep.</p>
Tue Oct 19, 2010 10:03 am	<a href="#">PROFILE</a> <a href="#">WWW</a>

Display posts from previous: [All posts](#) Sort by [Post time](#) [Ascending](#) [Go](#)[New Topic](#)[Post Reply](#)Page **1** of **1** [ 2 posts ][Board index](#) » [Ignition](#) » [Ignition Design Help](#)

All times are UTC - 8 hours

### Who is online

Users browsing this forum: No registered users and 2 guests

You **cannot** post new topics in this forum  
You **cannot** reply to topics in this forum  
You **cannot** edit your posts in this forum  
You **cannot** delete your posts in this forum  
You **cannot** post attachments in this forum

Search for:  [Go](#)Jump to: [Ignition Design Help](#) [Go](#)[Products](#) [Downloads](#) [Buy](#) [Solutions](#) [Integrators](#) [News](#) [Support](#) [About Us](#)[Media](#) [Developers](#) [Privacy Policy](#) [Terms of Use](#) [Refund Policy](#) [Sitemap](#)

Copyright © 2010 Inductive Automation. All rights reserved.

